



2. PARTS DESCRIPTION


2.1 BOX CONTENT

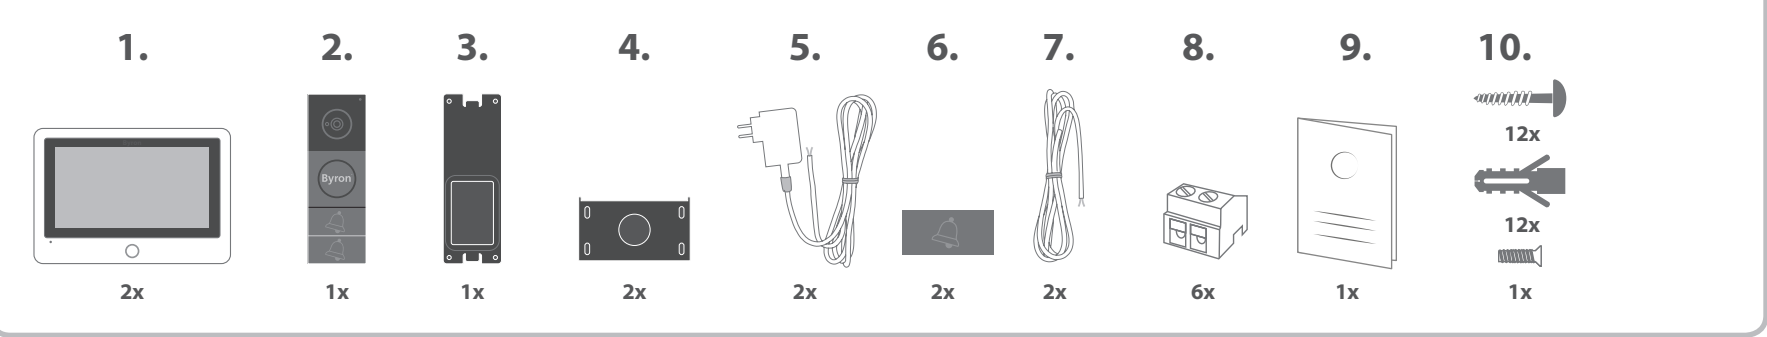

2.2 INDOOR UNIT (MONITOR)

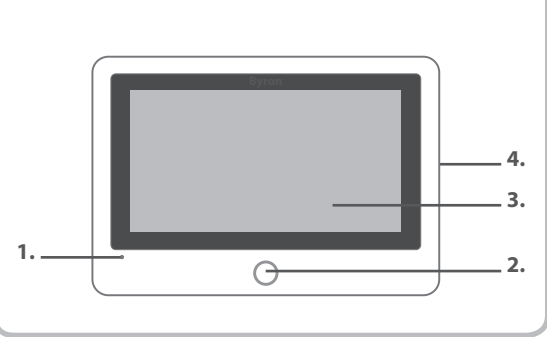


2.3 OUTDOOR UNIT (DOORBELL)

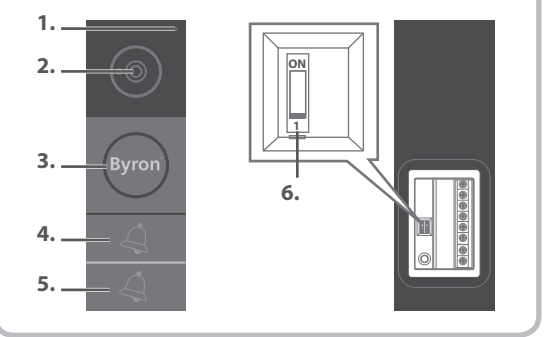


3. INSTALLATION


3.1 FIX THE MOUNTING PLATE OF THE INDOOR UNIT (MONITOR)

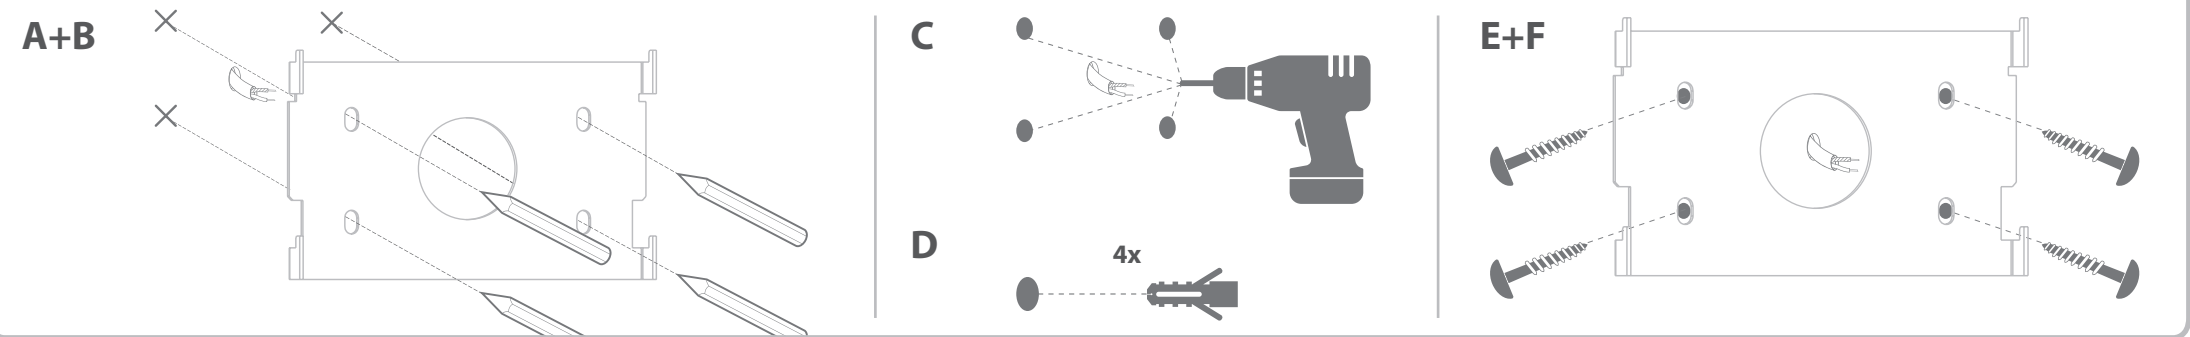


3.2 FIX THE MOUNTING PLATE OF THE OUTDOOR UNIT (DOORBELL)

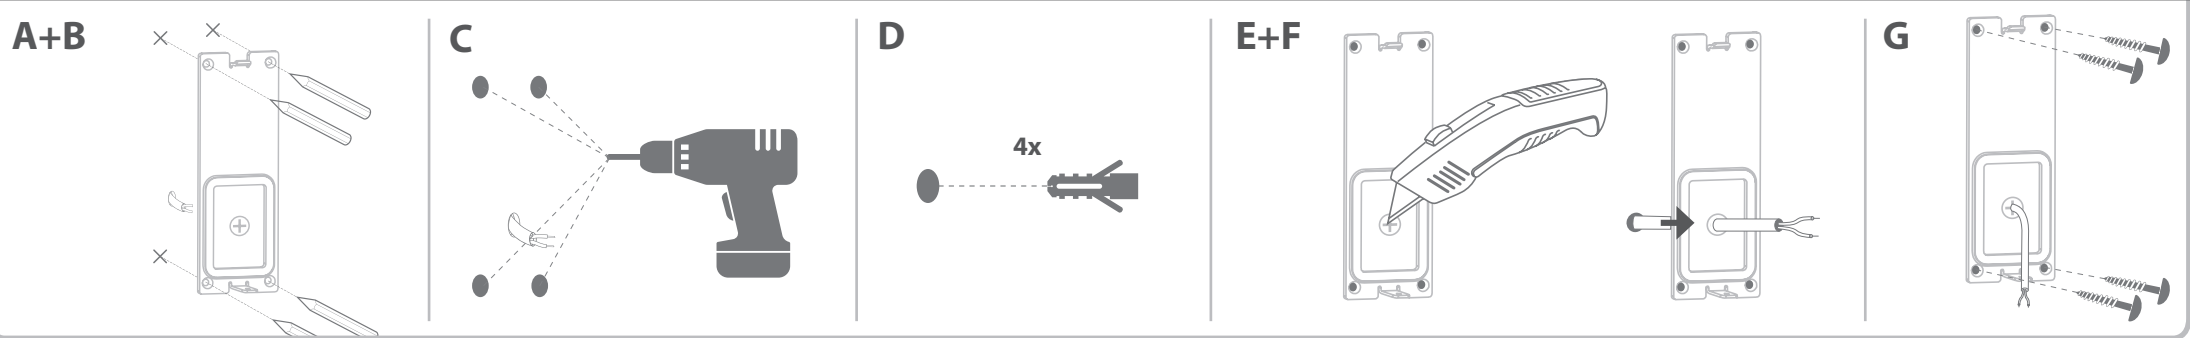


3.3 ELECTRICAL INSTALLATION

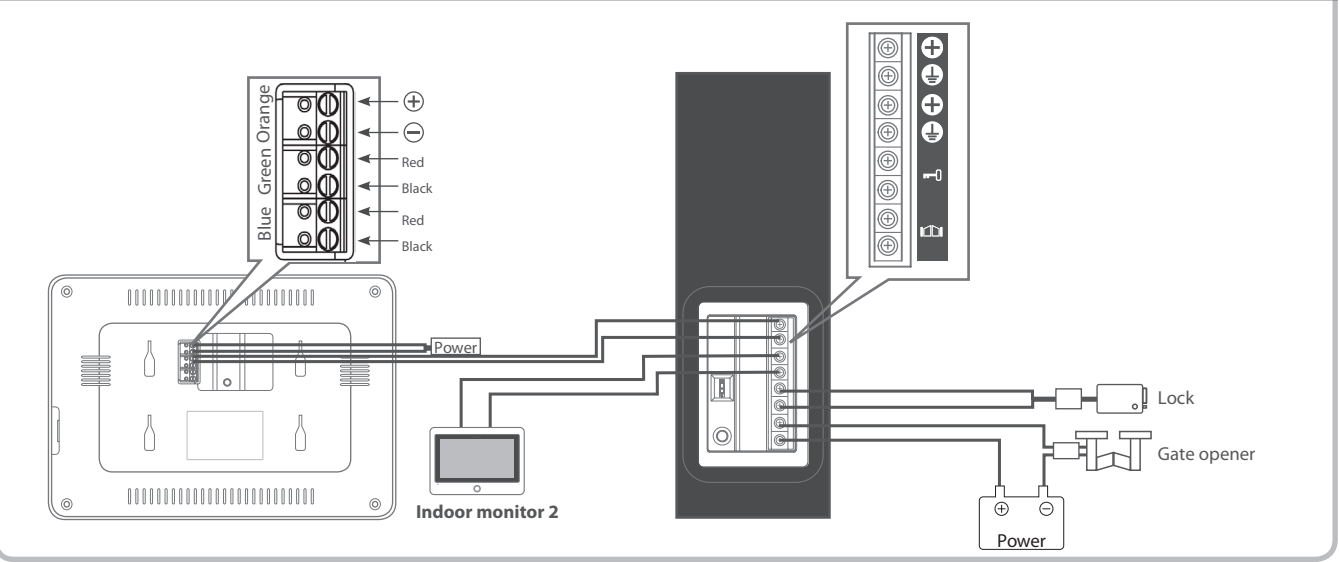


3.3.1 CONNECTING THE TERMINAL BLOCKS (INDOOR AND OUTDOOR UNIT)

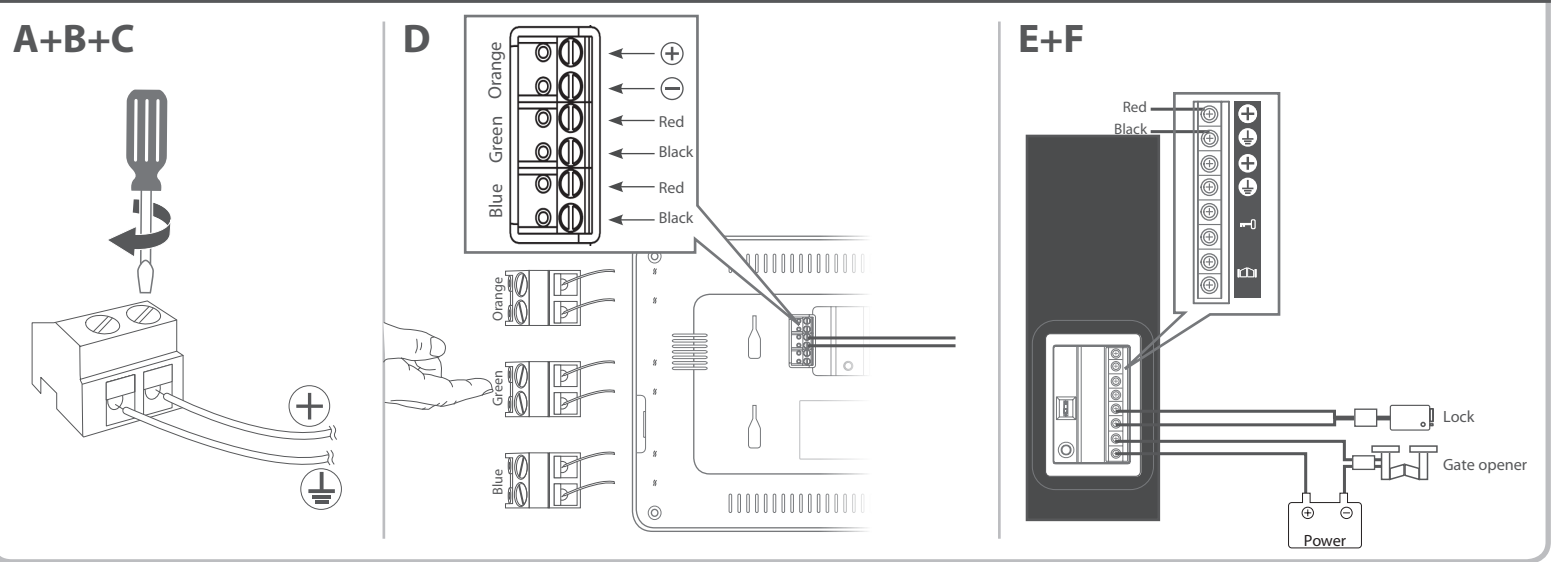


3.3.2 MOUNT THE INDOOR UNITS AND OUTDOOR UNIT

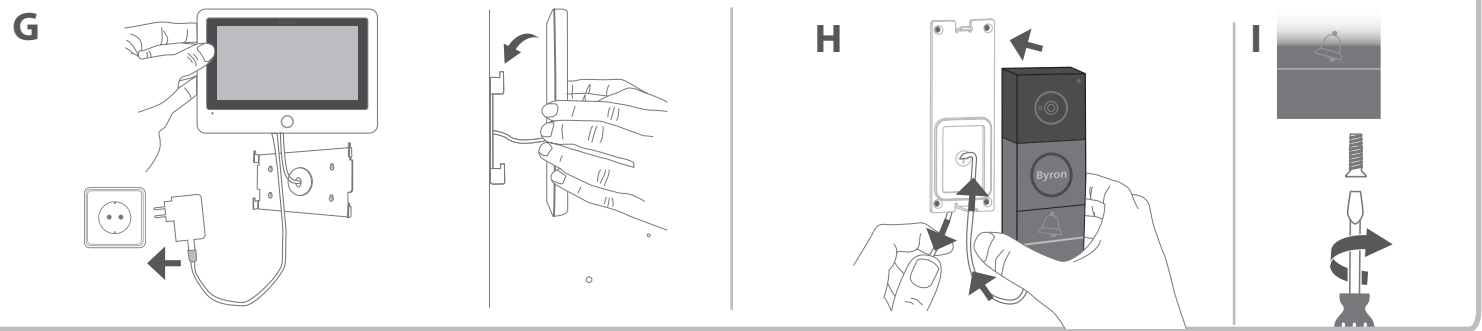


3.3.3 CONNECTING AN ADDITIONAL MONITOR (NOT INCLUDED)

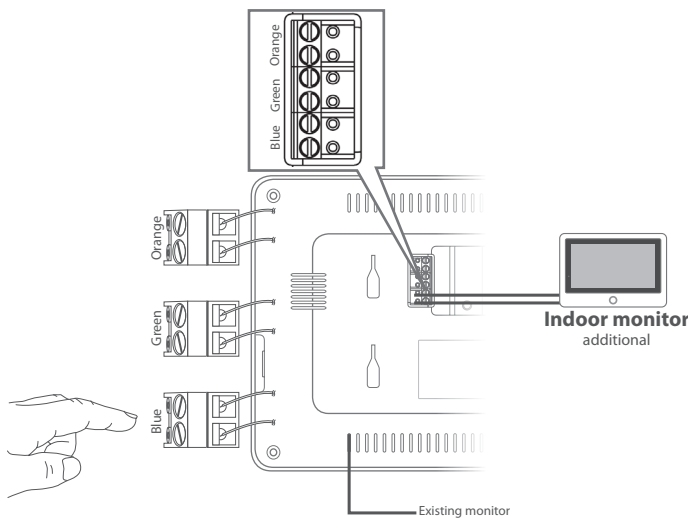


3.3.4 CONNECTING THE AC POWER

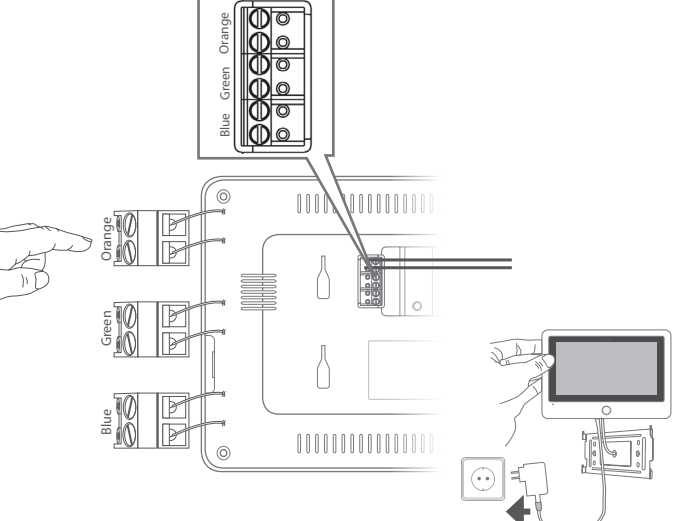

3.3.5 CONNECTING A DOOR LOCK (NOT INCLUDED) | 3.3.6 CONNECTING A GATE OPENER (NOT INCLUDED)

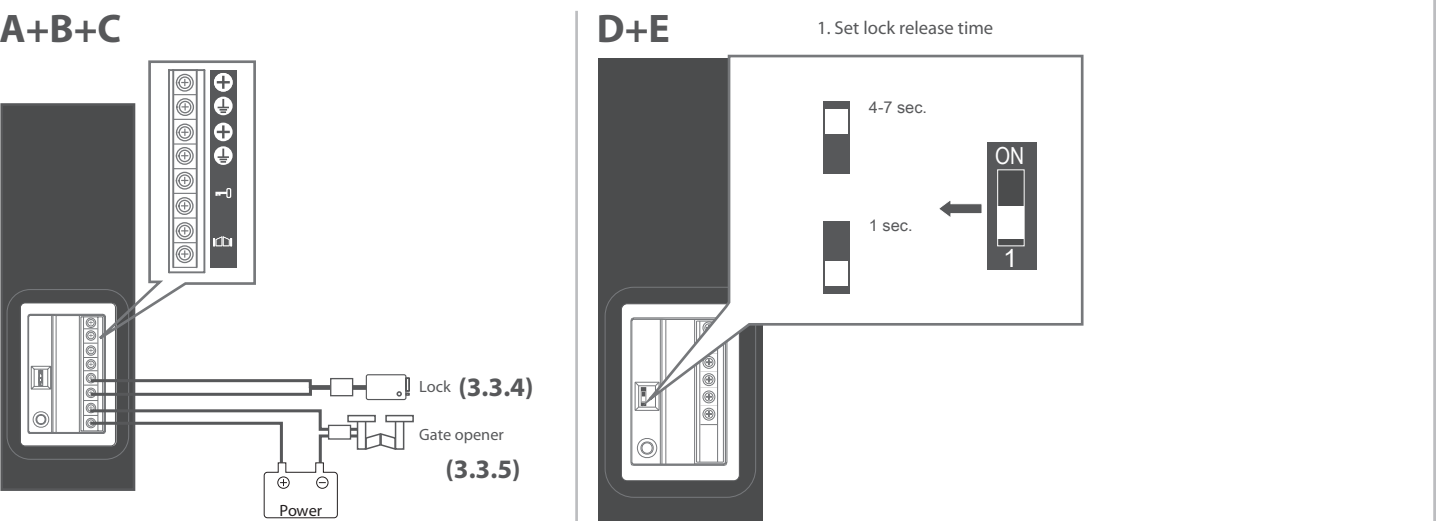


4. REPLACE CALL BUTTON

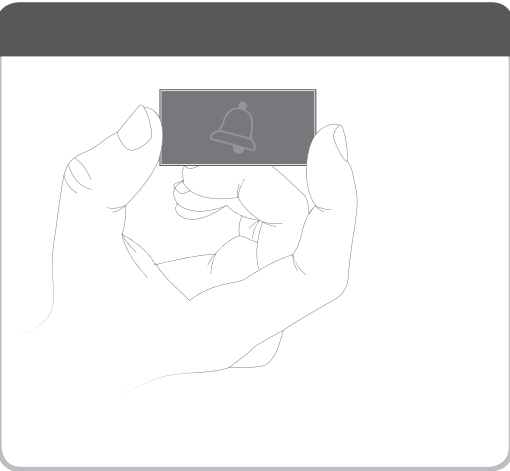


5. BASIC FUNCTIONS


5.1 ANSWERING A CALL

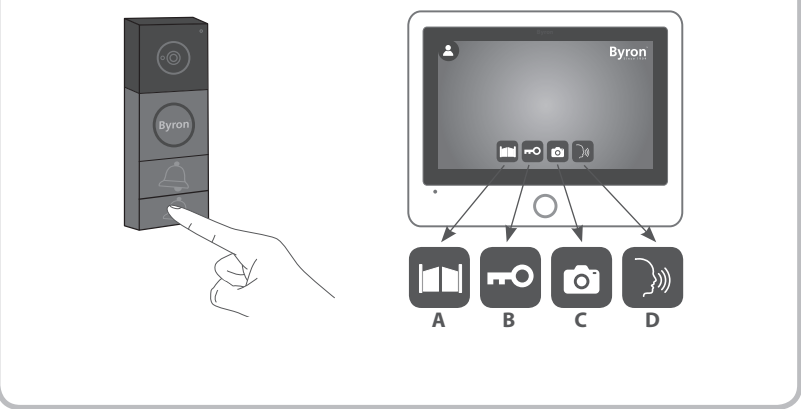


6. HOME SCREEN AND MENUS

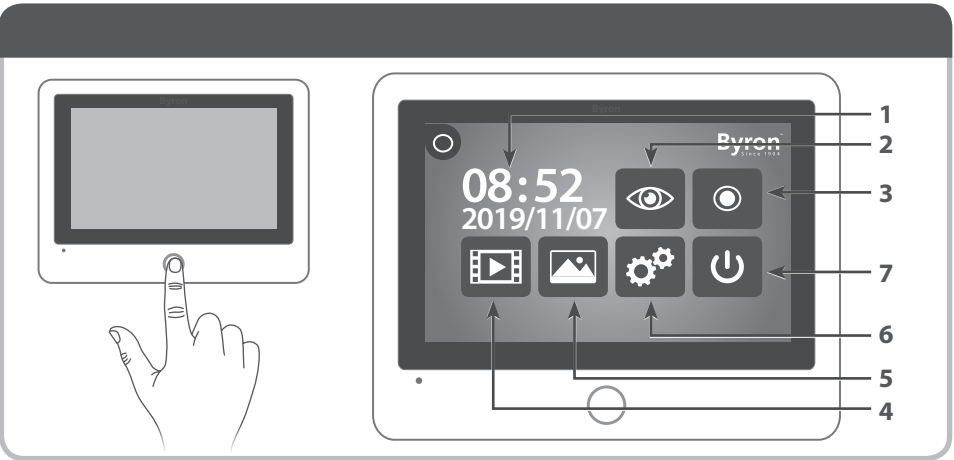


6.1 MONITOR MENU

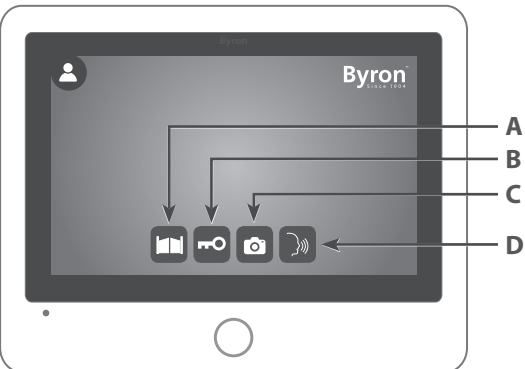


6.2 INTERNAL INTERCOM

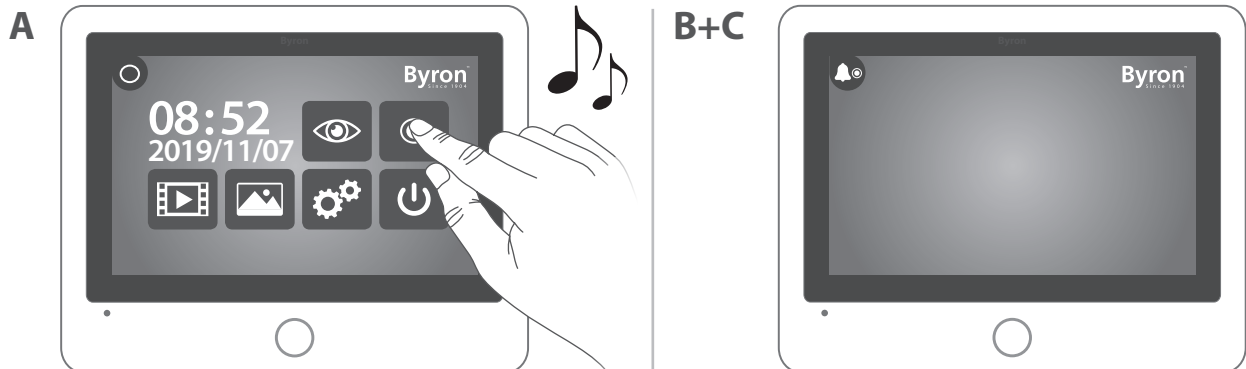


6.3 RECORDING PLAYBACK MENU

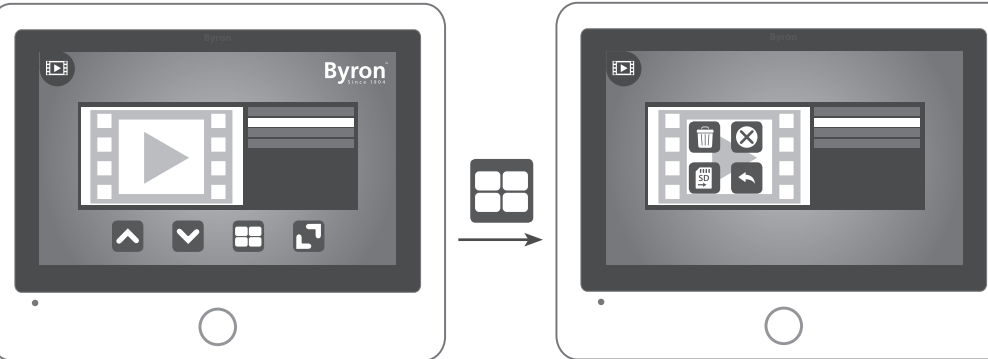


6.4 PHOTO MENU

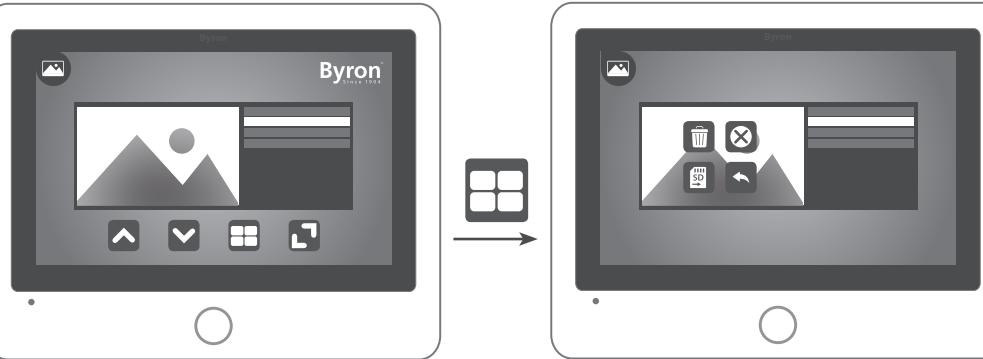


6.5 SETTINGS MENU

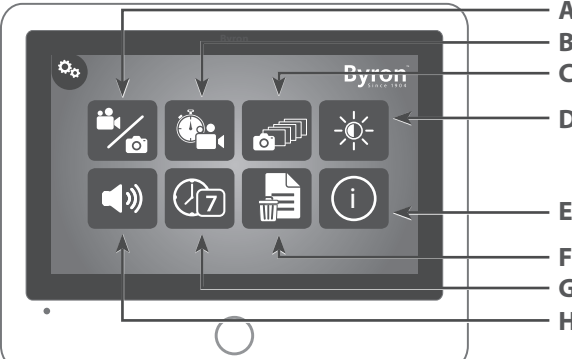


6.5.1 SELECT PHOTOS OR VIDEO RECORDINGS

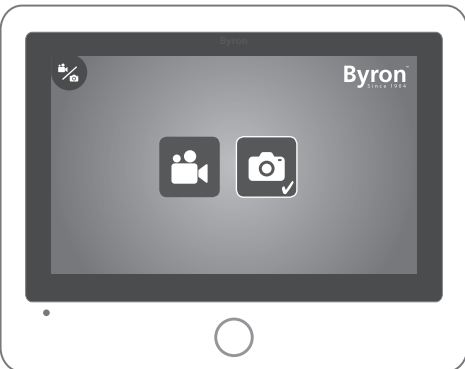


6.5.2 VIDEO DURATION

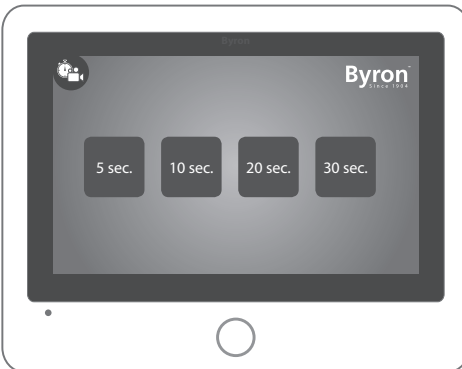

6.5.3 NUMBER OF PHOTOS

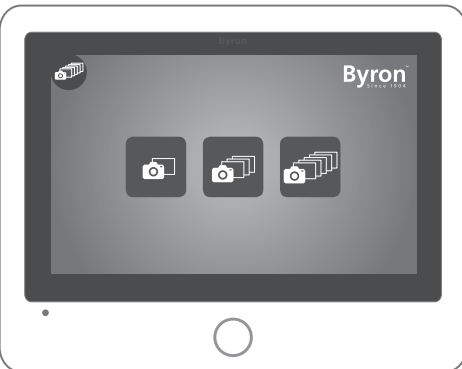


6.5.4 IMAGE SETTINGS

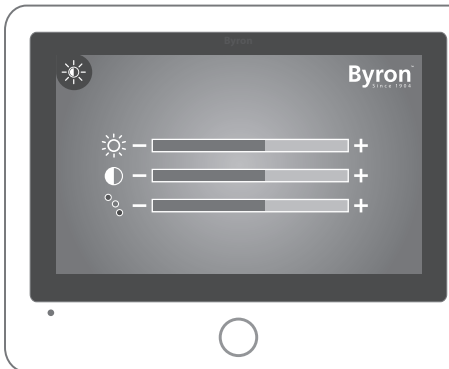


6.5.5 CUSTOMER SERVICE INFORMATION



6.5.6 FORMATTING MICROSD CARD / INTERNAL MEMORY

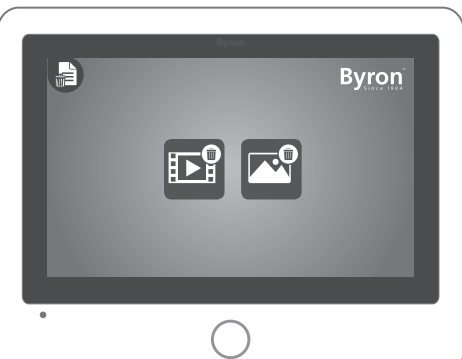

6.5.7 DATE AND TIME SETTINGS

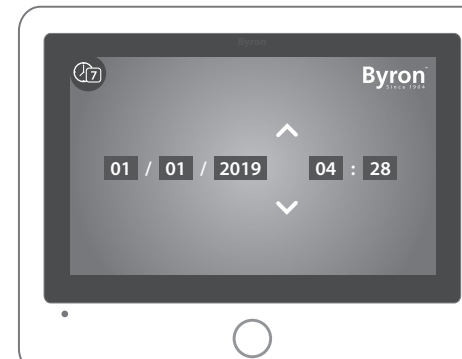

6.5.8 RINGTONE AND VOLUME

