

SF-500S/3UK Smarthome Switch Set

Information:

- This product has been designed for non-professional, domestic use only.
- Once unpacked examine the product for any damage. If you think there is a defect do not use and contact customer support on 0345 230 123.
- Dispose of all packaging correctly and responsibly using recycling facilities where possible.
- Do not leave packaging in reach of children as it can be a source of danger.
- Do not modify or alter the product, this may damage the product and void the warranty.
- Children should not play with this product.
- Clean with a dry cloth, do not use chemicals or abrasive materials.
- Suitable for indoor use only.

Notes for use:

This product has a maximum switching capacity of 1000 watts; ensure that the device you want to control via the receiver sockets does not exceed this load.

It is possible to use an extension lead into this product to turn many devices on/off together, however ensure that the TOTAL COMBINED WATTAGE of ALL the devices plugged into the extension lead does not exceed 1000w.

Try to avoid placing the receiver sockets next to transformer adaptors or high powered equipment especially motors as these can reduce the operating distance and the ability to be controlled from the remote control.


The remote control can operate the receiver sockets up to a distance of 25 metres in open air. Any material between the remote control and the receiver sockets will reduce this distance.

The remote control requires 1x CR2032 battery included in this pack, this should last around 12 months based on 20 operations per day. Dispose of used batteries correctly and do not put in the bin.

The remote control needs to be paired to the receiver sockets before use, please follow the steps below to complete this.

Installing battery

- Remove the battery cover of the remote by turning anti-clockwise and insert the battery supplied (CR2032) into the battery holder with the battery information facing up. Replace the battery cover and turn clockwise to lock.
- Briefly press any button on the remote control, the LED indicator light will be on, this shows that the battery has been inserted correctly.

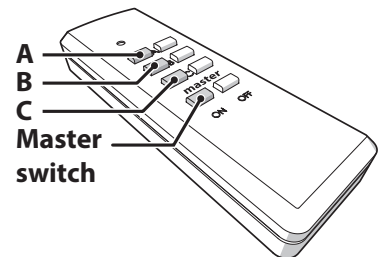

Pairing your remote control to a receiver socket

- Plug a receiver into the mains.
- The LED indicator will start blinking for around 30 seconds, the receiver is in pairing mode.
- While the LED is blinking press one of the left ON buttons (ABC) on the remote control to connect it to the receiver. The LED on the receiver will now stop blinking. The receiver is now connected to the remote control.
- Connect your other receivers to buttons A, B or C in the same way.

Operating a receiver

- Press the required ON button (ABC) on the remote control to turn on the receiver(s) connected to this button. The LED on the receiver will turn on.
- Press the corresponding right OFF button on the remote control to turn off the receiver(s). The LED on the receiver will turn off.
- The master key can control all receivers at the same time as a group.

Deleting a paired receiver

- Turn the receiver off using the OFF button on the remote control.
- Remove the receiver from the power point and wait 10 seconds.
- Insert the receiver back into the power point. The LED indicator will start blinking for around 30 seconds.
- While the LED is blinking press the required right OFF button (ABC) on the remote control to delete it from the receiver. The LED on the receiver will now blink quickly then slowly. When blinking stops the receiver is disconnected from the remote control.

Specification: 240V ~ 50Hz 4.2A
 Max Load 1000W
 Max Operating Distance: 25m
 Battery: CR2032
 Indoor Use Only

Smartwares declares that this appliance complies with the main essential requirements of the RE directive, 2014/53/EU. The complete declaration of conformity is available on request at:

smartwares Europe	NL: 088 5940501 Lokaal tarief
	BE: 078 481094(NL) Lokaal tarief
Jules Verneweg 87 5015 BH Tilburg The Netherlands	FR: 078 481540(FR) Tarif local
	FR: 0825 560 650 18ct/min
service.smartwares.eu	DE: +49 (0) 1805 010762 14Ct/Min. dt. Festnetz, Mobil max. 42Ct/Min
	UK: +44 (0) 345 230 1231 ES: +34 938427589



This symbol is known as the 'Crossed-out Wheeled Bin Symbol'. When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment