


EN Instruction Manual

HR Priručnik za rukovanje

SR Uputstvo za upotrebu

DVD Player

MP3 - USB - SD Slot

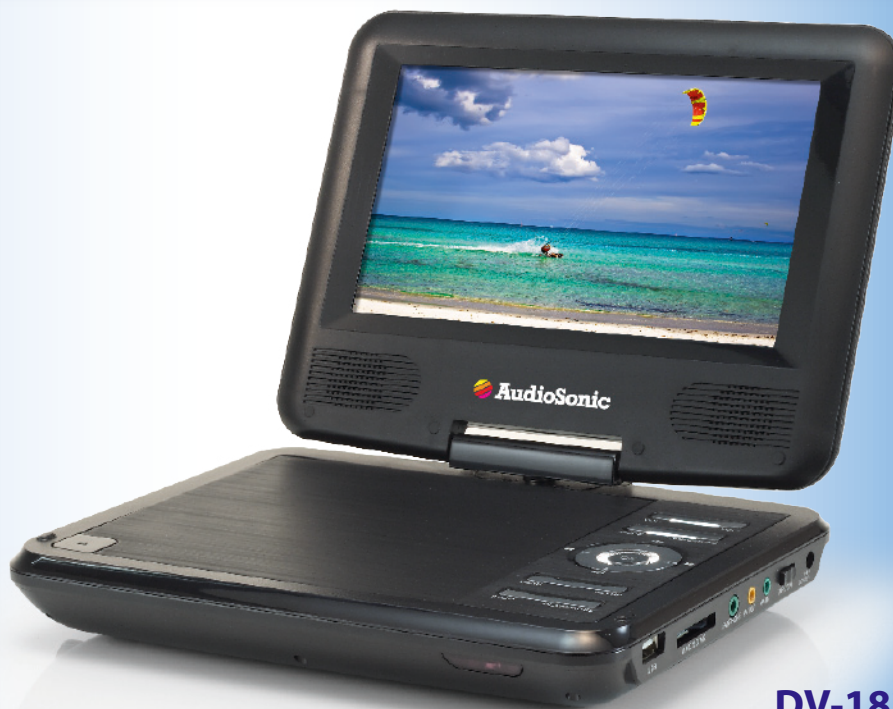

DV-1821

Thanks for purchasing our Portable DVD player.

Before operating this player, please read this manual and retain it for future reference. This player is totally new Audio Video player with high quality picture and sound. This player has 7 Inch LCD display, easy to carry and also has latest electronic technology, suitable for hotel, office, car, home use.

FEATURES

- 7 Inch display
- Earphone jack
- USB, SD/MMC slot
- Supports DVD, VCD, MPEG4, CD, MP3, CD-R, DVD-RW, JPG, DIVX, Kodak picture CD
- Power: DC 9-12V

ACCESSORIES

- User manual
- Remote control
- AV cable
- Power adaptor
- Car adaptor

IMPORTANT SAFETY INSTRUCTIONS

1. Deposition:

- Do not expose this product to water or moisture to avoid fire and electric shock.
- Do not expose this product to direct sunlight.
- Do not use this product near a heat source, magnetic field or dusty environment.
- Do not use this product on an unstable surface.

2. Installation:

- Please ensure you install the machine according to the user manual

3. Notes:


- Do not put anything into the holes in the machine.
- Do not pour any liquid on the machine to avoid fire and electric shock.
- Do not put heavy items on the machine.
- Make sure the machine has plenty of ventilation when in use. Do not cover the machine or power adaptor when in use. -Keep the machine away from fire.
- Do not open the any casing of the machine. Servicing is to be done by qualified personnel only.
- To clean the machine, ensure that the power is turned off. Use a slightly damp cloth to clean the outside of the machine if required.

4. Discs:

- Do not place the discs near any heat source, direct sunlight of high humidity areas.
- When not in use, store discs in their cases.
- Do not touch the disc surface; only hold them close to the edges.
- Ensure the disc is clean before use.
- Do not paste paper or stick any adhesive tape on the discs.
- To clean the disc, wipe the disc from inside to outside with a soft cloth.
- Do not use gasoline, non-special disc cleaning agents or antistatic spray to clean discs.





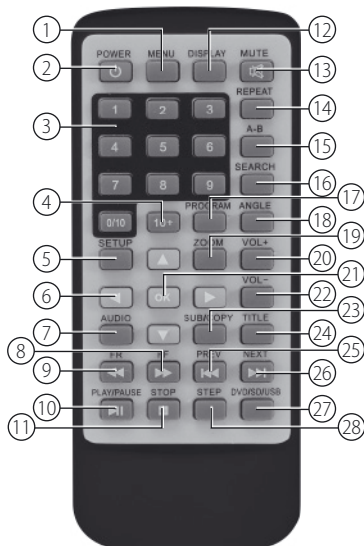

REMOTE CONTROL

1. MENU
2. Power
3. Numbers
4. 10+
5. DVD SETUP
6. UP/DOWN/LEFT/RIGHT
7. Audio button
8. FWD
9. REV
10. PLAY/PAUSE
11. Stop
12. Display
13. Mute
14. Repeat
15. A-B repeat
16. Search
17. Program
18. Angle
19. Zoom
20. VOL+
21. Confirm
22. VOL-
23. SUBTITLE/COPY
24. TITLE
25. PREV
26. NEXT
27. DVD/SDA/USB
28. STEP




BUTTON FUNCTION

Note: Some buttons are featured only on the remote control. Some buttons are on the machine itself only. Some buttons are located on both the remote and the machine.


Power	Turn the unit on/off.
DVD/SD/USB	Press this button to play from DVD, card reader/USB.
Setup	Press this button to enter the setup menu, press again to exit the set up menu.
Numbers	For use to select chapter and song.
UP/DOWN/LEFT/RIGHT	Press to enter the selected item, or to select an item.
Confirm / OK	Press to move the cursor or to adjust numerical.
MENU	Press this button to return to the DVD disc title menu or PBC function.
REPEAT	Press this button to use the repeat mode.
A-B	Press this button to view a selection of content. When the player is playing a disc, press this button to mark an A point, then press the button again to mark a B point. The player will then play the contents between point A and point B. Press the button again to cancel. Please note: Point A and Point B will need to be in the same movie or song playing.
	Press this button to skip to previous chapter or track.
	Press this button to skip to the next chapter or track.
	Press this button to play or resume play from FWD, REW, SLOW.
	Press this button to pause. Press this button twice to stop play.
Program	This button is used to program your favourite songs when playing a VCD or DVD disc. Press this button and then enter the number directly to start.
	Press this button to play fast forward. The speed is 2X, 4X, 8X, 16X or 32X.
	Press this button to play backward. The speed is 2X, 4X, 8X, 16X or 32X.

SEARCH	Press this button to select a certain title, chapter, track, title time, chapter time or tracking time to play by using the arrow buttons.
MUTE	Press this button to silence sound output. Press again to play sound output.
VOL +/-	Press Vol + to increase sound output. Press Vol - to reduce sound output.
AUDIO	Audio: Press to switch to other languages provided on a DVD disc.
TITLE	Press this button to return to a DVD disc title menu or PBC function
DISPLAY	Press this button to show or hide the playing disc info.
ZOOM	Press this button to zoom on screen. The screen can be zoomed in on twice, three times or four times. Press the arrow buttons to move the zoomed screen. Please note, this function is only suitable when playing a DVD, VCD or MPEG4.
SUB/COPY	Subtitle: Press the SUBTITLE button repeatedly to turn on and change the subtitle language shown on screen. COPY: You can copy files such as MP3, MP4, AVI, JPEG to your USB/SD card when one is inserted.


1. When playing the above files, press the "SUB/COPY" button on the remote control. It will display the following dialog box:

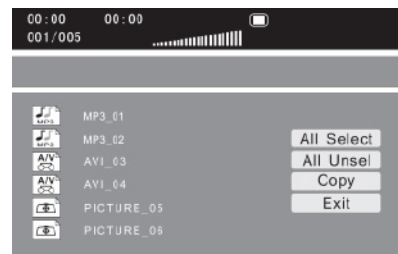


2. As per your requirement, move the cursor by the direction buttons on the remote control to choose: ALL SELECT, ALL UNSEL, COPY and EXIT. You can also move the cursor to the file you want to copy. Press the OK button on the remote control and the selected files will be marked with a tick. Please see as follows:

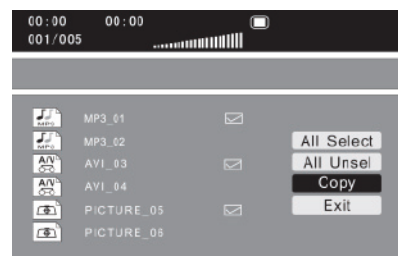


3. Move the cursor to COPY item and press OK. It will then display USB 1 on the right side of the dialog box. It means the selected files will then copy to USB 1. Please see as follows:

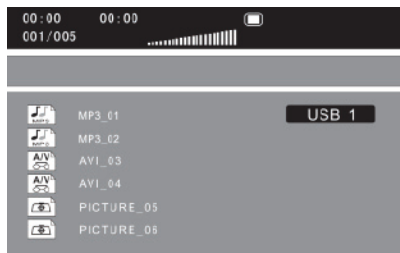


4. Press the OK button and it will display the following dialog box. If you want to copy, please move the cursor to choose NEXT, if not choose BACK.

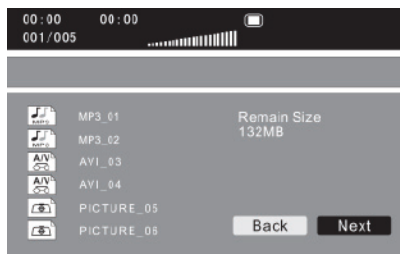

5. After moving the cursor to NEXT, press the OK button and the system will start copying. If you want to cancel copying, please choose CANCEL. Please see as follows:

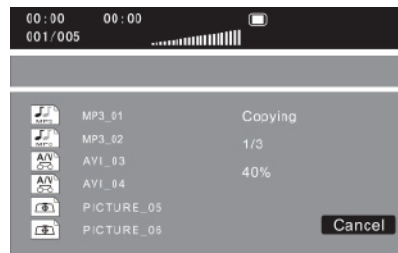

6. When the copying is finished, the system will return to the previous status.

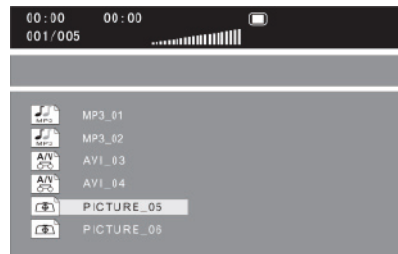

RECHARGE AND CONNECT

Recharge:

- The machine uses a rechargeable Li battery as it's direct power source. This kind of battery has a high energy density. Batteries such as these form a memory effect, it can be recharged at any time whether it has run out of power or not.
- Insert the power adaptor on one end of the local DC IN jack, and the other end into the mains socket to recharge. A full recharge on a completely flat battery takes about six hours.
- Note: Please switch off power on the machine when it is recharging. When the red indicator light is on, the battery is recharging. When the battery is completely recharged, this light will change to green.

Use and maintenance of batteries:

1. Working temperature of 0 - 45 Degrees Celsius.
2. Please unplug the power adaptor when not in use.
3. It is normal for heat to be generated from the unit during playback. Please avoid excessive use of the unit.

Connect:

The machine has a local Audio/Video output jack (AV OUT). Therefore, the user can connect the machine to a TV and watch the audio and video playing through the TV. Please see the following image for the correct way to connect to a TV set.

SYSTEM SETUP

Menu operating:

1. Press the SETUP button on the remote control or on the machine to enter the system setting menu.
2. Press the LEFT/RIGHT arrow buttons to choose the setting page.
3. Press the UP/DOWN arrow buttons to select the settings. Press CONFIRM, OK or LEFT/RIGHT to enter. Press the UP/DOWN arrow buttons to select the items and press CONFIRM or OK to confirm.
4. Press the arrow buttons to set other settings.
5. Press SET again to exit the settings menu.

Setting Page:

1. General Setting Page

There are six setting items in the General Setting Page: Angle, OSD, captions, screen saver, last memory or MP3 lyrics.

1.1 Angle Mark:

- Angle open: the screen will display the angle mark when playing a multi angle DVD disc.
- Angle close: the screen won't display the angle mark.
- Note: This function can only be used on multi angle discs.

1.2 Screen Display Language:

- To set up the screen display language

1.3 Hide the subtitle:

- ON: To display the hidden subtitle when playing the closed captioning
- OFF: Will not display the hidden subtitle
- Note: This function can only be used on discs with closed captions

1.4 Screen saver:

- ON: The screen will display the screen saver to protect the screen
- OFF: Turns off this function

1.5 Last memory setting:

- ON: Every time the machine shuts down or stops playing a disc, the machine will play the final point of memory. Next time you open the machine and play the same disc, the system will playback from the memory.
- OFF: Turn off this function

1.6 MP3 lyrics

- ON: The screen will display MP3 lyrics
- OFF: Turn off this function

2. Speaker setup page:

- Down mix setup
- RIGHT/LEFT Channel: mix the 5.1 channel audio to the left/right channels and then output by the left and right speakers.
- Stereo: Mix the 5.1 channel audio to stereo and then output by left and right speakers
- Note: This function can only be used on AC-3, 5.1 channel format discs.

3. SPDIF setup (on devices with SPDIF)

3.1 SPDIF Output.

- SPDIF /CLOSE: No digital audio output, only analogue output.
- PCM (Pulse Control Modulation) - Two channel stereo in digital format -suitable for AV receivers capable of decoding audio output in PCM mode (check with your amplifier).

4. Dolby setup.

4.1 Dual mono.

- Stereo: Left/Right channels will output by Left/Right speakers
- Left Channel: Left/Right speaker output Left channel audio
- Right channel: Left/Right speaker output Right channel audio
- Mixed channel: Left/Right speakers output the Left/Right mixed audio
- Note: This function suits to Dolby AC-3 or Two channel discs.

4.2 Dynamic Range Compression:

- To listen to a disc at low volume, you can adjust the dynamic balance to reduce sound.

5. Video Setup:

5.1 Panel Quality: To setup the panel quality

5.2 Video Quality: To setup the video quality

6. The initial Set Page:

- You can choose this setting when the machine has no disc inside or is on STOP position.

6.1 Sound, subtitle and disc menu language.

This allows you to choose the default settings of the sound, subtitles and disc menu language. At the same time, you can choose the sound language by pressing SOUND.

Note: If the disc does not include the above setting language, the disc will play it's default setting.

6.2 Age control.

The configuration settings of the machine allow the disc player to be set with a password to restrict use of the machine. The default password is 136900.

Note: This function will only work with discs with an age control built in.

6.3 Password Setting.

6.4 Password Format.

You can turn the password setting function on or off.

Note: You have to input the correct password to change the password setting. The default password is 136900.

6.5 Password.

You can re-set a new password. Note: The default password 136900 is still valid even after a new password has been set.

6.6 Default: You can return to the current settings to the original default.

Make sure you turn the machine off.

Play the disc:

A: Connect the power and ensure unit is turned on.

B: Press [] to open the disc tray and insert a disc.

C. Close the disc tray. The machine will read the disc automatically.

Play MP3/MPEG4 disc:

The content will be displayed on the screen after reading the MP3/MPEG4 disc.

1. Press the UP/DOWN arrow keys to select the file or folder.
2. Press OK or CONFIRM to enter the selected folder and display it's contents.
3. Press OK or CONFIRM to play the selected file.

PLAY

Play the Kodak CD disc:

- Put the Kodak CD disc into the machine. The machine will play the disc automatically.
- Press [■] to display the disc contents manu.
- Press the UP/DOWN arrow keys to select one picture, then press CONFIRM or [▶]. The machine will play the disc from the selected picture.
- GOTO: Press this button and select a picture by numbers. The machine will play the disc from the selected picture.

[■] : Press this button one time to pause the disc, press this button again or press [▶] to play the disc.

[▶] : Press this button to play the disc or resume play.

REPEAT : Press this button to shift the repeat play format.

▶▶/◀◀ : Press this button to skip to the previous/next picture.

- The LEFT/RIGHT button on the remote control: Press the RIGHT button to turn the picture clockwise, press the LEFT button to turn the picture counter clockwise.
- ZOOM: Press this button to zoom in/zoom out/resume that picture size. The arrow keys will be used to move the picture when the picture is zoomed in.

Play USB and SD/MMC card:

Plug in a USB to USB interface. Press the DVD/USB/SD button, the machine will play that drive automatically.

Insert a SD/MMC card to the SD/MMC card interface. Press the DVD/ USB/SD button, the machine will play the card driver automatically.

Play a DIVX disc:

DIVX is a film recording/video file format. They are DVD disc quality with a greater capacity. The format is AVI, for example:

1.5 hours file	MPEG-12 Format	DIVX Format
DVD(MPEG-2)	About 1.5-2GB	About 600-800MB
VCD(MPEG-1)	About 800MB-1 G	About 200-300 MB

Comparing MPEG-1, MPEG-2 and MPEG-4

	MPEG-1	MPEG-2	MPEG-4
Speed(kb/s)	1380kb/s (352X288)	6500kb/s	880kb/s (720X576)
Video quality	GOOD	Excellent	Perfect
Hardware requirement	Low	Middle	High

TECHNICAL SPECIFICATION

Support disc: DVD/VCD/CD/MP3/MPEG4/DIVX

Screen Size: 7 Inch

Frequency range: 20Hz-20KHz

Video Output: I/p-p75 Ohm Unbalanced

Audio Output: 1.4Vrms/10Kohm

Dynamic Range: ≥85db

Laser: semiconductor laser, wavelength: 650nm/795mm

Power supply: DC 9-12V

Power: 12W

Working temperature: 5-40 C

Battery: Li Battery

TROUBLE SHOOTING

Problem and Solution:

Associated with the maintenance staff, please follow the instructions to check the causes of the problem.

Problem	Cause	Solution way
No Power	Power adapter is not securely connected to the machine of insert the power outlet	Insert the power adapter to the DCIN jack and the electrical outlet
No sound	Volume is transferred to the smallest	Press VOL+ to enlarge the sound
	In the Mute statue	Press MUTE to recover the sound
	In the REW/FDW statue	Press PLAY or PLAY/PAUSE to recover the play
	Sound from the headphone	The sound will be from the speaker after pull the headphone
Can't Play the disc	Disc upside down and back	Put the disc proper
	Dirty Disc	Clean the disc
	Not compatible with the machine	Put the compatible disc

Problem	Cause	Solution way
Failure of he Remote control	No point at the remote control receiver	Make the remote control to point at the receiver
	The distance between remote control and the machine is too far	Keep the distance between remote control and the machine within 6 meters
	Remote control battery depletion	Change new batteries
	No batteries in the remote control	Fix the batteries
The machine is unable to read from USB or card slot	Death	Shut down the electricity and reopen the machine
	The inserted USB and Memory Card is not genuine	The machine is unable to support the non-genuine USB or memory card. The insertion of a non genuine USB or memory card can lead to no power to the unit. Please turn the machine off. The machine will return to normal after being restarted.

Zahvaljujemo na kupnji našeg Prijenosnog DVD playera.

Prije rada s ovim playerom, molimo pročitajte priručnik i zadržite ga za buduću referencu. Ovaj player je potpuno novi Audio Video player s slikom i zvukom visoke kvalitete. Ovaj player ima 7 inča LCD zaslon, lagan je za nositi i također ima posljednju elektroničku tehnologiju, prikladnu za hotel, ured, automobil, kućnu upotrebu.

SVOJSTVA

- 7 inča zaslon
- Utičnica za slušalicu
- USB, SD/MMC otvor
- Podrška DVD, VCD, MPEG4, CD, MP3, CD-R, DVD-RW, JPG, DIVX, Kodak slike CD
- Struja: DC 9-12V

DODATNA OPREMA

- Korisnički priručnik
- Daljinski upravljač
- AV kabel
- Strujni adapter
- Adapter automobila

VAŽNE SIGURNOSNE UPUTE

1. Odlaganje:

- Ne izlažite ovaj proizvod vodi ili vlazi da biste izbjegli požar ili električni šok.
- Ne izlažite ovaj proizvod direktnoj sunčevoj svjetlosti.
- Ne koristite ovaj proizvod blizu izvora topline, magnetskog polja ili prašnjave okoline.
- Ne koristite ovaj proizvod na nestabilnim površinama.

2. Instalacija:

- Molimo pobrinite se da instalirate uređaj u skladu s korisničkim priručnikom

3. Bilješke:


- Ne stavljajte ništa u otvore uređaja.
- Ne polijevajte bilo kakvu tekućinu na uređaj da biste izbjegli požar ili električni šok.
- Ne stavljajte teške predmete na uređaj.
- Pobrinite se da uređaj ima dovoljno ventilacije kad se koristi. Ne pokrivajte uređaj ni strujni adapter kada se koriste. -Držite uređaj podalje od vatre.
- Ne otvarajte niti jedno kućište uređaja. Servis mora obaviti samo kvalificirano osoblje.
- Da biste očistili uređaj, pobrinite se da je struja isključena. Koristite laganu tkaninu da biste očistili vanjski dio uređaja ako je to potrebno.

4. Diskovi:

- Ne stavljajte diskove blizu izvora topline, direktne sunčeve svjetlosti ili područja visoke vlage.
- Kada se ne koriste, pohranite diskove u njihove omote.
- Ne dirajte površinu diska; držite ih samo za rubove.
- Pobrinite se da je disk čist prije upotrebe.
- Ne lijepite papir ni ljepljivu traku na diskove.
- Da biste očistili diskove, obrišite ih sa mekanom tkaninom od unutrašnjosti prema vani.
- Ne koristite benzin, neodređena sredstva za čišćenje diskova ili antistatičke sprejeve za čišćenje diskova.

DALJINSKI UPRAVLJJAČ

1. MENU
2. Power
3. Brojevi
4. 10+
5. DVD POSTAVKE
6. GORE/DOLJE/LIJEVO/DESNO
7. Audio tipka
8. FWD
9. REV
10. PLAY/PAUSE
11. Stop
12. Display
13. Mute
14. Repeat
15. A-B ponavljanje
16. Search
17. Program
18. Angle
19. Zoom
20. VOL+
21. Confirm
22. VOL-
23. PODNASLOV/KOPIRANJE
24. TITLE
25. PREV
26. NEXT
27. DVD/SDA/USB
28. STEP

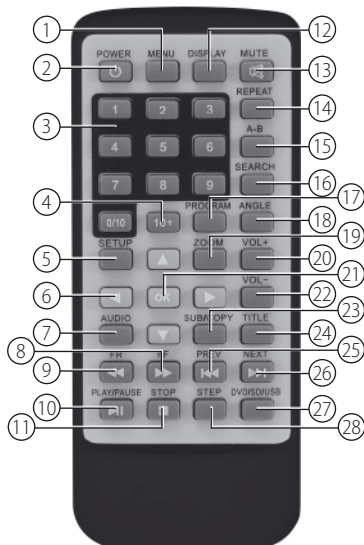


FUNKCIJA TIPKE

Primjedba: Neke su tipke popraćene samo na daljinskom upravljaču. Neke su tipke samo na samom uređaju. Neke su tipke smještene i na daljinskom i na uređaju.


Struja	Uključite/Isključite jedinicu.
DVD/SD/USB	Pritisnite tipku da biste pokrenuli DVD, čitač kartice/USB-a.
Postavke	Pritisnite ovu tipku da biste ušli u izbornik postavki, pritisnite ponovno da biste izašli iz izbornika postavki.
Numbers	Koristi se za izbor poglavlja i pjesme.
UP/DOWN/LEFT/RIGHT	Pritisnite da biste ušli u izabrane stavke, ili da izaberete stavku.
Potvrditi / OK	Pritisnite da pomaknete pokazivač ili da podesite brojeve.
IZBORNIK	Pritisnite ovu tipku da biste se vratili na izbornik naslova diska DVD-a ili PBC funkciju.
PONAVLJANJE	Pritisnite ovu tipku da biste koristili način rada s ponavljanjem.
A-B	Pritisnite ovu tipku da biste vidjeli izbor sadržaja. Kada player svira disk, pritisnite ovu tipku da biste označili točku A, zatim pritisnite tipku ponovno da biste označili točku B. Player će tada svirati sadržaje između točke A i točke B. Pritisnite tipku ponovno za otkazivanje. Molimo primijetite: Točka A i točka B trebati će biti u istom filmu ili pjesmi.
	Pritisnite ovu tipku da biste preskočili na prethodno poglavlje ili pjesmu.
	Pritisnite ovu tipku da biste preskočili na sljedeće poglavlje ili pjesmu.
	Pritisnite ovu tipku da biste reproducirali ili nastavili s reprodukcijom od FWD, REW, SLOW.
	Pritisnite ovu tipku za pauzu. Pritisnite ovu tipku dva puta da bi zaustavili reprodukciju.

Program	Ova se tipka koristi za programiranje vaše omiljene pjesme kada svira VCD ili DVD disk. Pritisnite ovu tipku i zatim unesite broj direktno za početak.
▶▶	Pritisnite ovu tipku da biste premotali unaprijed. Brzina je 2X, 4X, 8X, 16X ili 32X.
◀◀	Pritisnite ovu tipku da biste premotali unazad. Brzina je 2X, 4X, 8X, 16X ili 32X.
PRETRAGA	Pritisnite ovu tipku da biste izabrali eprodukciju određenog naslova, poglavlja, pjesme, vremena naslova, vremena poglavlja ili vremena pjesme koristeći tipke strelice.
NIJEMO	Pritisnite ovu tipku da biste utišali izlaz zvuka. Pritisnite ponovno da biste reproducirali izlaz zvuka.
VOL +/-	Pritisnite Vol + da biste povećali izlaz zvuka. Pritisnite Vol- da biste smanjili izlaz zvuka.
AUDIO	Audio: Pritisnite prekidač na drugi jezik koji je omogućen na DVD disku.
NASLOV	Pritisnite ovu tipku da biste se vratili na izbornik naslova diska DVD-a ili PBC funkciju.
ZASLON	Pritisnite ovu tipku da prikazete ili sakrijete informacije o reprodukciji diska.
ZUM	Pritisnite ovu tipku da biste zumirali na zaslonu. Zaslon se može zumirati dva, tri ili četiri puta. Pritisnite tipke strelica da biste pomakli zumirani zaslon. Molimo primijetite, ova funkcija prikladna je samo kada rade DVD, VCD ili MPEG4.
SUB/COPY	Subtitle: Pritisnite tipku PODNASLOV više puta da biste uključili i promijenili jezik podnaslova na zaslonu. KOPIRANJE: Možete kopirati datoteke kao što su MP3, MP4, AVI, JPEG na vašu USB/SD karticu kada je umetnuta.


1. Kada rade gore navedene datoteke, pritisnite " SUB/COPY" tipku na daljinskom upravljaču. Izkazati će se slijedeći okvir za dijalog:

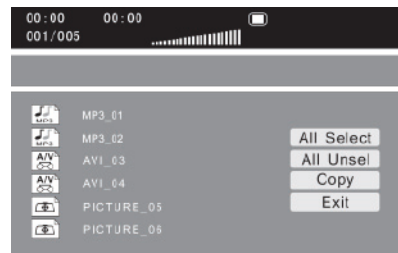


2. Za vaš zahtjev, pomaknite pokazivač tipkama smjera na daljinskom upravljaču da biste izabrali: SVE IZABRATI(ALL SELECT), SVE NEIZABRATI(ALL UNSEL), KOPIRATI(COPY) i IZAĆI(EXIT). Također možete pomicati pokazivač na datoteku koju želite kopirati. Pritisnite OK tipku na daljinskom upravljaču i izabrane datoteke biti će označene znakom viđenog. Molimo pogledajte kako slijedi:

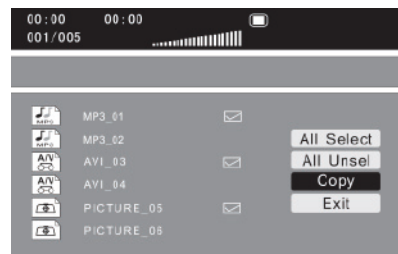


3. Pomaknite pokazivač na KOPIRANJE(COPY) stavku i pritisnite OK. Tada će se prikazati USB 1 na desnoj strani okvira za ijalog. To znači da će se izabrane datoteke tada kopirati na USB 1 (USB 1). Molimo pogledajte kako slijedi:

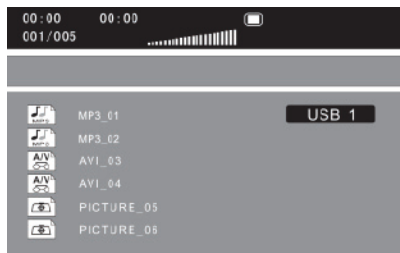


4. Pritisnite OK tipku i prikazat će se sljedeći okvir s dijelomom. Ako želite kopirati, molimo pomaknite pokazivač da biste izabrali SLJEDEĆE(NEXT), ako ne izaberite NATRAG(BACK). Funkcija tipke

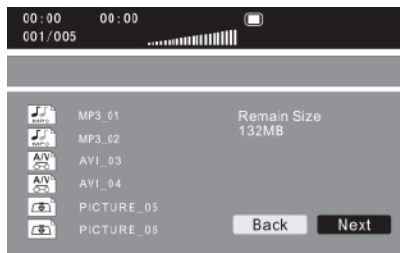

5. Nakon pomicanja pokazivača na SLJEDEĆE(NEXT), pritisnite OK tipku i sustav će početi kopirati. Ako želite otkazati kopiranje, molimo izaberite OTKAZIVANJE(CANCEL). Molimo pogledajte kako slijedi:

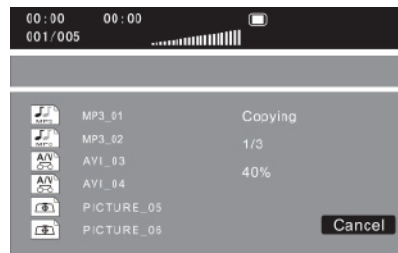

6. Kada je kopiranje završeno, sustav će se vratiti na prijašnji status.

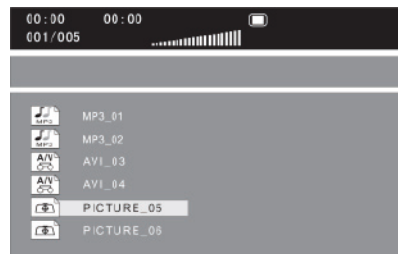

PONOVNO PUNJENJE I SPAJANJE

Ponovno punjenje:

- Ovaj uređaj koristi Li bateriju koja se može puniti kao svoj direktan izvor struje. Ova vrsta baterije ima veliki energetski naboj. Baterije poput ove formiraju učinak memorije, mogu se puniti u bilo koje vrijeme bez obzira jeli ponestalo struje ili ne.
- Umetnite strujni adapter na jedan kraj lokalne DC IN utičnice, i drugi kraj u glavne utičnice za ponovno punjenje. Potpuno punjenje potpuno prazne baterije traje oko šest sati.
- Primjedba: Molimo isključite struju na uređaju kada ga puniti. Kada je crveno svjetlo pokazivača upaljeno, baterija se puni. Kada je baterija potpuno napunjena, ovo će se svjetlo promijeniti na zeleno.

Korištenje i održavanje baterija:

1. Radna temperatura 0 - 45 stupnjeva celzijevih.
2. Molimo odspojite strujni adapter kada se ne koristi.
3. Normalno je da se toplina generira iz jedinice tijekom reprodukcije. Molimo izbjegavajte pretjerano korištenje jedinice.

Spajanje:

Uređaj ima lokalnu Audio/Video izlaznu utičnicu (AV OUT). Stoga, korisnik može spojiti uređaj na TV i gledati audio i video reprodukciju putem TV-a. Molimo pogledajte sljedeće slike za ispravan način spajanja na TV sustav.

POSTAVLJANJE SUSTAVA

Upravljanje izbornikom:

1. Pritisnite SETUP tipku na daljinskom upravljaču ili na uređaju da biste unijeli izbornik sustava postavki.
2. Pritisnite tipku LJEVE/DESNE strelice da biste izabrali stranicu s postavkama.
3. Pritisnite tipku GORE/DOLJE strelice da biste izabrali postavke. Pritisnite CONFIRM, OK ili LJEVO/DESNO za unos. Pritisnite tipku strelice GORE/DOLJE da biste izabrali stavke i pritisnite CONFIRM ili OK za potvrdu.
4. Pritisnite tipku strelice da biste postavili druge postavke.

5. Pritisnite POSTAVKE ponovno da biste izašli iz izbornika postavki.

Stranica postavki:

1. Stranica općih postavki

- Postoji šest stavki postavki na Stranici općih postavki: Kut, OSD, opisi, screen saver, posljednja memorija ili MP3 stihovi.

1.1 Oznaka kuta:

- Kut otvoren: zaslom će prikazati oznaku kuta kada radi DVD disk s višestrukim kutem.
- Kut zatvoren: zaslom neće prikazati oznaku kuta.
- Primjedba: Ova se funkcija može koristiti samo na diskovima s višestrukim kutem.

1.2 Jezik zaslona:

- Za postavljanje jezika zaslona

1.3 Sakriti podnaslov:

- ON: Za prikaz skrivenog podnaslova kada je uključeno zatvoreno titlovanje
- OFF: Neće se prikazati skriveni podnaslovi
- Primjedba: Ova se funkcija može koristiti samo na diskovima sa zatvorenim titlovima.

1.4 Screen saver:

- ON: Zaslom će prikazati screen saver da bi se zaštitio zaslom
- OFF: Isključite ove funkcije

1.5 Postavljanje posljednje memorije:

- ON: Svaki put kada se uređaj isključi ili disk prestane raditi, uređaj će se pokrenuti od posljednje točke memorije. Sljedeći put kada pokrenete uređaj i isti disk, sustav će se pokrenuti iz memorije.
- OFF: Isključite ovu funkciju

1.6 MP3 stihovi

- ON: Zaslom će prikazati MP3 stihove
- OFF: Isključite ovu funkciju

2. Stranica postavki zvučnika:

- Postavke donjeg miksa
- DESNI/LIJEVI kanal: miksati 5.1 audio kanal na lijevi/desni kanal i zatim iznijeti kroz lijeve i desne zvučnike.
- Stereo: Miksati 5.1 audio kanal na stereo i zatim iznijeti lijevim i desnim zvučnicima
- Primjedba: Ova se funkcija može koristiti samo na AC-3, diskovima formata 5.1 kanala.

3. SPDIF postavke (na uređajima sa SPDIF)

3.1 SPDIF Izlaz.

- SPDIF /ZATVORITI: Nema digitalnog audio izlaza, samo analogni izlaz.
- PCM (Podešavanje kontrole pulsa) - Stereo s dva kanala u digitalnom formatu -prikladan za AV prijamnike sposobne za dekodiranje audio izlaza u PCM načinu rada (provjerite s vašim pojačalom).

4. Dolby postavke:

4.1 Dual mono.

- Stereo: Lijevi/Desni kanali će se iznijeti putem Lijevog/Desnog zvučnika
- Lijevi kanal: Izlaz Lijevog/Desnog zvučnika Lijevog audio kanala
- Desni kanal: Izlaz Lijevog/Desnog zvučnika Desnog audio kanala
- Miješani kanal: Izlaz Lijevog/Desnog zvučnika Lijevog/Desnog miješanog audia
- Primjedba: Ova funkcija odgovara Dolby AC-3 ili Diskovima s dva kanala.

4.2 Dinamički raspon kompresije:

- Da biste slušali disk pri niskoj glasnoći, možete prilagoditi dinamičku ravnotežu da biste smanjili zvuk.

5. Postavke Video:

5.1 Kvaliteta ploče: Za postavljanje kvalitete ploče

5.2 Kvaliteta videa: Za postavljanje kvalitete videa

6. Početna stranica postavki:

- Možete izabrati ovu postavku kada u uređaju nema diska ili je u STOP položaju.

6.1 Zvuk, podnaslov ili jezik izbornika diska.

- Ovo vam dopušta da izaberete zadane postavke zvuka, podnaslova i jezika izbornika diska. U isto vrijeme, možete izabrati jezik zvuka pritišćući ZVUK.
- Primjedba: Ako disk ne uključuje gore navedeni jezik postavki, disk će reproducirati zadane postavke.

6.2 Kontrola starenja.

- Postavke konfiguracije uređaja dopuštaju disk playeru da dobije lozinku koja ograničava korištenje uređaja. Zadane lozinka je 136900
- Primjedba: Ova će funkcija raditi samo s diskovima s ugrađenom kontrolom starenja.

6.3 Postavljanje lozinke.

6.4 Format lozinke.

- Možete uključiti ili isključiti funkciju postavljanja lozinke.
- Primjedba: Morate unijeti ispravnu lozinku da biste promijenili postavke lozinke. Zadane lozinka je 136900

6.5 Lozinka.

- Možete ponovno postaviti novu lozinku.
- Primjedba: Zadana lozinka 136900 još uvijek je valjana čak i nakon što je nova lozinka postavljena.

6.6 Zadano: Možete se vratiti sa trenutnih postavki na originalne zadane.

- Pobrinite se da isključite uređaj.

Reprodukcija diska:

A: Spojite struju i pobrinite se da je jedinica uključena.

B: Pritisnite [] da biste otvorili ladicu diska i umetnuli disk.

C. Zatvorite ladicu diska. Uređaj će automatski očitati disk.

Reproducirajte MP3/MPEG4 disk:

Sadržaj će se prikazati na zaslonu nakon očitavanja MP3/MPEG4 diska.

1. Pritisnite GORE/DOLJE strelice da biste izabrali dokument ili datoteku.
2. Pritisnite OK ili POTVRDITI da biste unijeli izabranu datoteku i prikazali njene sadržaje.
3. Pritisnite OK ili POTVRDITI da biste reproducirali izabranu datoteku.

REPRODUKCIJA

Reproduciranje Kodak CD diska:

- Stavite Kodak CD disk u uređaj. Uređaj će automatski reproducirati disk.
- Pritisnite [■] da bi prikazali izbornik sadržaja diska.
- Pritisnite UP/DOWN strelice da biste izabrali sliku, zatim pritisnite CONFIRM ili [▶]. Uređaj će reproducirati disk od izabrane slike.
- GOTO: Pritisnite ovu tipku i izaberite sliku putem brojeva. Uređaj će reproducirati disk od izabrane slike.

[■] : Pritisnite ovu tipku jedan put da biste zaustavili disk, pritisnite ovu tipku ponovno i pritisnite [▶] da biste reproducirali disk.

[▶] : Pritisnite ovu tipku da biste reproducirali ili nastavili reprodukciju.

PONAVLJANJE: Pritisnite ovu tipku da biste prebacili na format ponavljanja reprodukcije.

▶▶/◀◀ : Pritisnite ovu tipku da biste preskočili prethodnu/sljedeću tipku.

- LIJEVO/DESNO tipka na daljinskom upravljaču: Pritisnite DESNO tipku da biste okrenuli sliku u smjeru kazaljke na satu, pritisnite LIJEVO tipku da biste okrenuli sliku u smjeru suprotnog od smjera kazaljke na satu.
- ZUM: Pritisnite ovu tipku da zumirate/smanjite/vratite veličinu te slike. Strelice se koriste za pomicanje slike kada je slika zumirana.

Reprodukcija USB i SD/MMC kartice

- Uključite USB na USB sučelje. Pritisnite DVD/USB/SD tipku, uređaj će se pokrenuti taj pogon automatski.
- Umetnite SD/MMC karticu u sučelje SD/MMC kartice. Pritisnite DVD/USB/SD tipku, uređaj će se pokrenuti pogon kartice automatski.

Reprodukcija DIVX diska:

DIVX je snimanje filma/format video datoteke. Oni su kvalitete DVD diska s većim kapacitetom. Format je AVI, na primjer:

1.5 satna datoteka	MPEG-12 Format	DIVX Format
DVD(MPEG-2)	Oko 1.5-2GB	Oko 600-800MB
VCD(MPEG-1)	Oko 800MB-1 G	Oko 200- 300 MB

Uspoređivanje MPEG-1, MPEG-2 i MPEG-4

	MPEG-1	MPEG- 2	MPEG- 4
Brzina(kb/s)	1380kb/s (352x288)	6500kb/s	80kb/s (720X576)
Kvaliteta videa	DOBRA	Odlična	Savršena
Zahtjev hardvera	Niska	Srednja	Visoka

TEHNIČKA SPECIFIKACIJA

Disk podrške:	DVD/VCD/CD/MP3/MPEG4/DIVX
Veličina ekrana:	7 Inča
Raspon frekvencije:	20Hz-20KHz
Video Izlaz:	IVp-p75 Ohm Neuravnotežen
Audio Izlaz:	1.4Vrms/10Kohm
Dinamički raspon:	≥85db
Laser:	poluvodički laser, duljina vala: 650mm795mm
Napajanje:	DC 9-12V
Struja:	12W
Radna temperatura:	5- 40 C
Baterija:	Li Baterija

RJEŠAVANJE PROBLEMA

Problem and Solution:

Associated with the maintenance staff, please follow the instructions to check the causes of the problem.

Problem	Uzrok	Način rješenja
Nema Struje	Strujni adapter nije sigurno spojen na stroj umetnute utičnice	Umetnite strujni adapter u DCIN i u električnu utičnicu
Nema zvuka	Glasnoća je prenesena na najmanje	Pritisnite VOL+ da biste pojačali zvuk
	U Nijemom načinu	Pritisnite MUTE da biste vratili zvuk
	U REW/FDW načinu	Pritisnite PLAY ili PLAY/PAUSE da biste vratili rad
	Zvuk iz slušalica	Zvuk će biti iz zvučnika nakon isključivanja slušalica
Disk Ne radi	Disk je naopako i na obrnutoj strani	Stavite disk primjereno
	Nečist disk	Očistite disk
	Nije kompatibilan s uređajem	Stavite kompatibilan disk

Problem	Uzrok	Način rješenja
Kvar Daljinskog upravljača	Prijamnik daljinskog upravljača nije usmjeren	Usmjerite daljinski upravljač u prijamnik
	Udaljenost između daljinskog upravljača i uređaja je prevelika	Držite udaljenost između daljinskog upravljača i uređaja unutar 6 metara
	Potrošnja baterije daljinskog upravljača	Promijenite nove baterije
	Nema baterija u daljinskom upravljaču	Popravite baterije
Uređaj ne može čitati s USB ili utora za karticu,	Mrtav	Isključite struju i ponovno pokrenite uređaj
	Umetnuti USB i Memorijska kartica nisu izvorni	Uređaj nije u mogućnosti poduprijeti neizvorni USB ili memorijsku karticu. Umetanje neizvornog USB ili memorijske kartice može dovesti do nedostatka struje u jedinici. Molimo isključite uređaj. Uređaj će se vratiti u normalu nakon što se ponovno pokrene.

Zahvaljujemo na kupovini prenosnog DVD plejera.

Pre rukovanja ovim plejerom, molimo da pročitate priručnik i sačuvate ga radi budućih konsultacija. Ovaj plejer je potpuno nov audio video plejer sa visokim kvalitetom slike i zvuka. Ovaj plejer ima LCD displej od 7 inča, lak je za nošenje i poseduje najnoviju elektronsku tehnologiju, pogodnu za upotrebu u hotelu, kancelariji, autu, kući.

KARAKTERISTIKE:

- Displej od 7 inča
- Priključak za slušalice
- USB, SD/MMC otvor
- Podržava DVD, VCD, MPEG4, CD, MP3, CD-R, DVD-RW, JPG, DIVX, Kodak picture CD
- Napon: DC 9-12V

PRIBOR:

- Korisničko uputstvo
- Daljinski upravljač
- AV kabl
- Napojni adapter
- Adapter za auto

VAŽNA BEZBEDNOSNA UPUTSTVA

1. Smeštanje:

- Ne izlažite ovaj proizvod vodi ili vlazi da biste izbegli požar i električni udar.
- Ne izlažite ovaj proizvod direktnoj sunčevoj svetlosti.
- Ne koristite ovaj proizvod blizu izvora toplote, magnetnog polja ili prašnjavog okruženja.
- Ne koristite ovaj proizvod na nestabilnoj površini.

2. Instalacija:

- Molimo da instalirate uređaj u skladu sa korisničkim uputstvom

3. Napomene:


- Ne stavljajte ništa u otvore na uređaju.
- Ne sipajte bilo kakvu tečnost na uređaj da biste izbegli požar i električni udar.
- Ne stavljajte teške predmete na uređaj.
- Pobrinite se da uređaj ima dovoljnu ventilaciju prilikom korišćenja. Ne prekrivajte uređaj ili napojni adapter tokom korišćenja. -Držite uređaj dalje od vatre.
- Ne otvarajte nijedno kućište uređaja. Servisiranje isključivo treba da obavlja kvalifikovano osoblje.
- Da biste očistili uređaj, pobrinite se da je napajanje isključeno. Koristite blago ovlaženu tkaninu za čišćenje spoljašnjosti uređaja ukoliko je potrebno.

4. Diskovi:

- Ne stavljajte diskove blizu ikakvog izvora toplote, pod direktnu sunčevu svetlost ili u područja velike vlažnosti.
- Kada se ne koriste, odlažite diskove u njihove futrole.
- Ne dodirujte površine diskova; držite ih isključivo za ivice.
- Pobrinite se da je disk čist pre korišćenja.
- Ne lepite papir ili ikakvu lepljivu traku na diskove.
- Da biste očistili disk, obrišite ga iznutra ka spolja mekom tkaninom.
- Ne koristite benzin, obična sredstva ili antistatički sprej za čišćenje diskova.



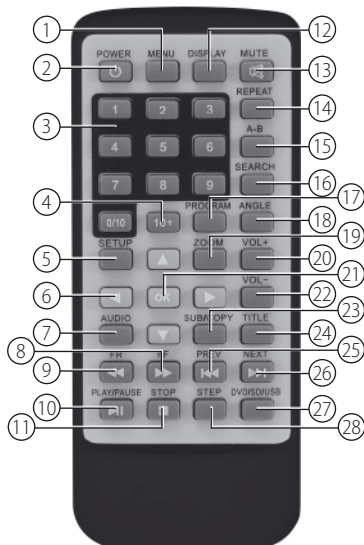

DALJINSKI UPRAVLJAČ

1. MENU
2. Power
3. Brojevi
4. 10+
5. DVD PODEŠAVANJE
6. GORE/DOLE/LEVO/DESNO
7. Audio taster
8. PREMOTAVANJE UNAPRED
9. PREMOTAVANJE UNAZAD
10. PLAY/PAUSE
11. Stop
12. Display
13. Mute
14. Repeat
15. A-B ponavljanje
16. Search
17. Program
18. Angle
19. Zoom
20. VOL+
21. Confirm
22. VOL-
23. TITL/KOPIRANJE
24. TITLE
25. PREV
26. NEXT
27. DVD/SDA/USB
28. STEP




FUNKCIJE TASTERA

Napomena: Neki tasteri su postavljeni isključivo na daljinskom upravljaču. Neki tasteri su isključivo na samom uređaju. Neki tasteri se nalaze i na daljinskom upravljaču i na uređaju.


Struja	Uključite/isključite jedinicu.
DVD/SD/USB	Pritisnite ovaj taster za reprodukciju sa DVD, čitača kartice/USB.
Postavke	Pritisnite ovaj taster da uđete u meni podešavanja, pritisnite ponovo za izlazak iz menija podešavanja.
Numbers	Za korišćenje pri izboru poglavlja ili pesme.
UP/DOWN/LEFT/RIGHT	Pritisnite da uđete u izabranu stavku, ili izaberete stavku.
Potvrditi / OK	Pritisnite za pomeranje kursora ili numeričko podešavanje.
IZBORNIK	Pritisnite ovaj taster za povratak na naslovni meni DVD diska ili PBC funkciju.
PONAVLJANJE	Pritisnite ovaj taster da biste koristili režim ponavljanja.
A-B	Pritisnite ovaj taster da biste videli izabrani sadržaj. Kada plejer reprodukuje disk, pritisnite ovaj taster da označite tačku A, zatim ponovo pritisnite taster da označite tačku B. Plejer će tada reprodukovati sadržaje između tačke A i tačke B. Pritisnite taster ponovo za poništavanje. Obratite pažnju: Tačka A i tačka B moraju biti u istom filmu ili pesmi koji se reprodukuju.
	Pritisnite ovaj taster da se prebacite na prethodno poglavlje ili numeru.
	Pritisnite ovaj taster da se prebacite na sledeće poglavlje ili numeru.
	Pritisnite ovaj taster da reprodukujete ili nastavite reprodukciju iz NPR, NZD, SPORO.
	Pritisnite ovaj taster za pauzu. Pritisnite ovaj taster dvaput za zaustavljanje reprodukcije.

Program	Ovaj taster se koristi za programiranje Vaših omiljenih pesama kada se reprodukuje VCD ili DVD disk. Pritisnite ovaj taster i zatim unesite broj direktno za start.
▶▶	Pritisnite ovaj taster za brzo premotavanje napred. Brzina je 2X, 4X, 8X, 16X ili 32X.
◀◀	Pritisnite ovaj taster za brzo premotavanje nazad. Brzina je 2X, 4X, 8X, 16X ili 32X.
PRETRAGA	Pritisnite ovaj taster da izaberete određeni naslov, numeru, vreme naslova, vreme poglavlja ili vreme numere za reprodukciju korišćenjem tastera sa strelicama.
NIJEMO	Pritisnite ovaj taster da utišate izlaz zvuka. Pritisnite ponovo za reprodukciju izlaznog zvuka.
VOL +/-	Pritisnite Vol + da pojačate izlazni zvuk. Pritisnite Vol - da smanjite izlazni zvuk.
AUDIO	Audio: Pritisnite za prebacivanje na druge jezike koji su omogućeni na DVD disku.
NASLOV	Pritisnite ovaj taster za povratak na naslovni meni DVD diska ili PBC funkciju.
ZASLON	Pritisnite ovaj taster za prikaz ili skrivanje informacija o reprodukovanom disku.
ZUM	Pritisnite ovaj taster da zumirate na ekranu. Ekran se može zumirati dva, tri ili četiri puta. Pritisnite tastere sa strelicama za pomeranje zumiranog ekrana. Obratite pažnju, ova funkcija je isključivo pogodna pri reprodukciji DVD, VCD ili MPEG4.
SUB/COPY	Titl: Pritisnite SUBTITLE taster više puta da uključite i promenite jezik titla prikazanog na ekranu. KOPIRANJE: Možete kopirati datoteke poput MP3, MP4, AVI, JPEG na Vaš USB/SD karticu kada se ubace.


1. Pri reprodukciji navedenih datoteka, pritisnite " SUB/COPY" taster na daljinskom upravljaču. Prikazaće se sledeći dijalog:

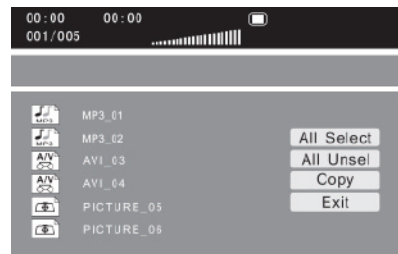


2. Kao po Vašem zahtevu, pomerite kursor tasterima za smer na daljinskom upravljaču da izaberete: IZABERI SVE (ALL SELECT), ODZNAČI SVE (ALL UNSEL), KOPIRAJ (COPY) i IZLAZ (EXIT). Takođe možete pomeriti kursor na datoteku koju želite da kopirate. Pritisnite OK taster na daljinskom upravljaču i izabrane datoteke će biti označene. Pratite kako sledi:

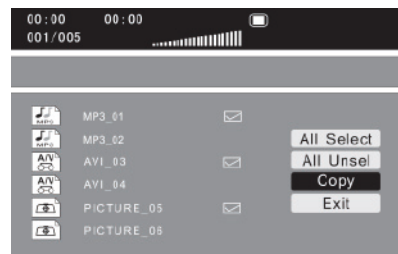


3. Pomerite kursor na KOPIRAJ (COPY) stavku i pritisnite OK. Tada će se prikazati USB 1 na desnoj strani dijaloga. To znači da će se izabrane datoteke kopirati na USB 1. Pratite kako sledi:

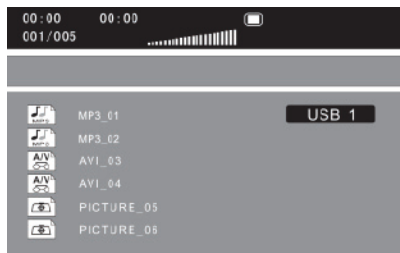


4. Pritisnite OK taster i prikazaće se sledeći dijalog. Ukoliko želite da kopirate, molimo pomerite kursor da izaberete, u suprotnom izaberite NAZAD (BACK).

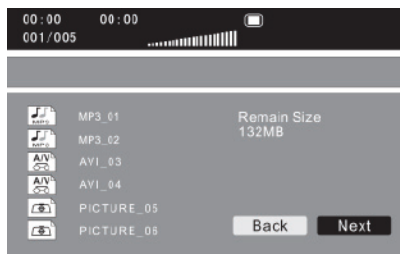

5. Nakon pomeranja kursora na SLEDEĆE (NEXT), pritisnite OK taster i sistem će započeti kopiranje. Ukoliko želite da poništite kopiranje, molimo izaberite PONIŠTI (CANCEL). Pratite kako sledi:

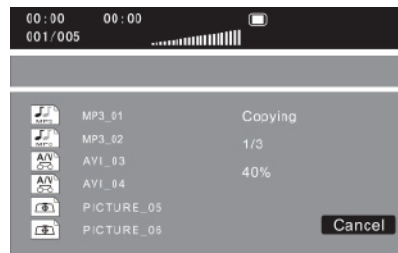

6. Kada je kopiranje završeno, sistem će se vratiti u prethodno stanje.

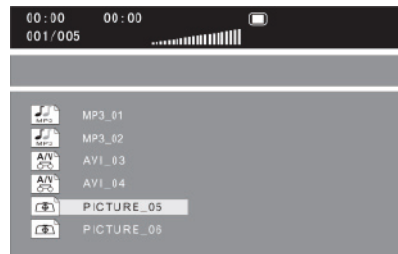

NAPUNITE I POVEŽITE

Napunite:

- Uređaj koristi punjivu Li bateriju kao direktni izvor napajanja. Ova vrsta baterije ima veliku energetska gustinu. Baterije poput ovih formiraju memorijski efekat, mogu se puniti u bilo koje vreme bez obzira da li su se ispraznile ili ne.
- Ubacite napojni adapter na jednom kraju u lokalni DC IN priključak, a na drugom kraju u utičnicu radi punjenja. Za kompletno punjenje potpuno prazne baterije je potrebno oko šest sati.
- Napomena: Molimo isključite uređaj tokom punjenja. Kada se upali crveno svetlo indikatora, baterija se puni. Kada je baterija kompletno napunjena, ovo svetlo će se promeniti u zeleno.

Upotreba i održavanje baterija:

1. Radna temperatura od 0 - 45 stepeni Celzijusa.
2. Molimo da isključite napojni adapter kada nije u upotrebi.
3. Normalno je da se stvara toplota od strane jedinice tokom reprodukcije. Molimo da izbegavate prekomerno korišćenje jedinice.

Povežite:

Uređaj ima lokalni audio/video izlazni priključak (AV IZLAZ). Stoga, korisnik može da poveže uređaj na TV i gleda audio i video reprodukciju na njemu. Molimo da pogledate sledeću sliku za pravilno povezivanje na TV uređaj.

PODEŠAVANJE SISTEMA

Meni rukovanja:

1. Pritisnite SETUP taster na daljinskom upravljaču ili na uređaju da uđete u meni podešavanja sistema.
2. Pritisnite LEVO/DESNO tastere sa strelicama da izaberete stranicu podešavanja.
3. Pritisnite GORE/DOLE tastere sa strelicama da izaberete podešavanja. Pritisnite CONFIRM, OK ili LEVO/DESNO za ulazak. Pritisnite GORE/DOLE tastere sa strelicama za izbor stavki i pritisnite CONFIRM ili OK da potvrdite.
4. Pritisnite tastere sa strelicama da postavite ostala podešavanja.
5. Pritisnite POSTAVI ponovo da izađete iz menija podešavanja.

Stranica podešavanja:

1. Stranica opštih podešavanja

- Postoji šest podešavajućih stavki na stranici opštih podešavanja: Ugao, OSD, poglavlja, čuvar ekrana, poslednje memorisano ili MP3 tekstovi.

1.1 Oznaka ugla:

- Ugao otvoren: ekran će prikazivati oznaku ugla pri reprodukciji DVD diska sa višestrukim uglovima.
- Ugao zatvoren: ekran neće prikazivati oznaku ugla.
- Napomena: Ova funkcija se može koristiti isključivo kod diskova sa višestrukim uglovima.

1.2 Jezik prikaza ekrana:

- Da biste podesili jezik prikaza ekrana

1.3 Sakrijte titlove:

- UKLJ: Da prikazete sakriveni titl tokom reprodukcije zatvorenog poglavlja
- ISKLJ: Neće prikazivati sakriveni titl
- Napomena: Ova funkcija se može koristiti isključivo kod diskova sa zatvorenim poglavljima

1.4 Čuvar ekrana:

- UKLJ: Ekran će prikazivati čuvara ekrana kako bi se zaštitio
- ISKLJ: Isključuje ovu funkciju

1.5 Podešavanje poslednje memorisanog:

- UKLJ: Svaki put kada se uređaj isključi ili zaustavi reprodukciju diska, uređaj će reprodukovati poslednju memorisanu tačku. Sledeći put kada otvori uređaj i reprodukuje isti disk, sistem će reprodukovati iz memorije.
- ISKLJ: Isključite ovu funkciju

1.6 MP3 tekstovi

- UKLJ: Ekran će prikazivati MP3 tekstove
- ISKLJ: Isključite ovu funkciju

2. Stranica za podešavanje zvučnika

- Podešavanje kombinovanja kanala
- DESNO/LEVO Channel: kombinujte 5.1 kanalni audio i leve/desne kanale i zatim izlaz po levim i desnim zvučnicima.
- Stereo: Kombinujte 5.1 kanalni audio i stereo i zatim izlaz po levim i desnim zvučnicima.
- Napomena: Ova funkcija se može koristiti isključivo kod AC-3 diskova sa formatom kanala 5.1.

3. SPDIF podešavanje (na uređajima sa SPDIF)

3.1 SPDIF izlaz.

- SPDIF /CLOSE: Nema digitalnog audio izlaza, samo analognog izlaza.
- PCM (Modulacija kontrole impulsa) - Dva kanala stereo u digitalnom formatu -pogodno za AV koji su sposobni da dekodiraju audio izlaz u PCM režimu (proverite pomoću pojačala).

4. Dolby podešavanje.

4.1 Dual mono.

- Stereo: Levi/desni kanali će imati izlaz po levim/desnim zvučnicima
- Levi kanal: Levi/desni zvučnik kao izlaz za levi audio kanal
- Desni kanal: Levi/desni zvučnik kao izlaz za desni audio kanal
- Kombinovani kanal: Levi/desni zvučnik kao izlaz za levi/desni kombinovani audio
- Napomena: Ova funkcija odgovara Dolby AC-3 ili dvokanalnim diskovima.

4.2 Kompresija dinamičkog opsega:

- Da biste slušali disk na maloj jačini, možete prilagoditi dinamički balans radi smanjenja zvuka.

5. Video podešavanje:

5.1 Kvalitet panela: Da biste podesili kvalitet panela

5.2 Video kvalitet: Da biste podesili video kvalitet

6.1 Zvuk, titl i jezik menija diska.

- Ovo Vam omogućava da izaberete podrazumevane postavke zvuka, titlova i jezika menija diska. Istovremeno, možete izabrati jezik zvuka pritiskajući ZVUK.
- Napomena: Ukoliko disk ne sadrži pomenuti jezik postavke, disk će reprodukovati svoj podrazumevani jezik.

6.2 Kontrola uzrasta.

- Postavke konfiguracije uređaja omogućavaju da se plejer podesi sa lozinkom radi ograničavanja upotrebe uređaja. Podrazumevana lozinka je 136900.
- Napomena: Ova funkcija će raditi samo sa diskovima koji imaju ugrađenu kontrolu uzrasta.

6.3 Postavka lozinke.

6.4 Format lozinke.

- Možete uključiti ili isključiti funkciju postavke lozinke.
- Napomena: Morate uneti ispravnu lozinku da biste promenili postavku lozinke. Podrazumevana lozinka je 136900.

6.5 Lozinka.

- Možete postaviti novu lozinku.
- Napomena: Podrazumevana lozinka 136900 je važeća čak i nakon postavljanja nove lozinke.

6.6 Podrazumevano: Možete vratiti trenutne postavke na fabrički podrazumevane.

- Pobrinite se da ste isključili uređaj.

Reprodukujte disk:

A: Priključite napajanje i pobrinite se da je jedinica uključena.

B: Pritisnite [] da otvorite fioku za disk i ubacite disk.

C: Zatvorite fioku za disk. Uređaj će očitati disk automatski.

Reprodukujte MP3/MPEG4 disk:

Sadržaj će biti prikazan na ekranu nakon očitavanja MP3/MPEG4 diska.

- 1. Pritisnite GORE/DOLE strelice sa tasterima da izaberete datoteku ili fasciklu.
- 2. Pritisnite OK ili POTVRDI da uđete u izabranu fasciklu i prikažete njen sadržaj.
- 3. Pritisnite OK ili POTVRDI da reprodukujete izabranu datoteku.

Reprodukujte Kodak CD disk:

- Postavite Kodak CD disk u uređaj. Uređaj će reprodukovati disk automatski.
- Pritisnite [■] da se prikaže meni sa sadržajem diska.
- Pritisnite GORE/DOLE tastere sa strelicama da izaberete jednu sliku, zatim pritisnite POTVRDI ili [▶]. Uređaj će reprodukovati disk od izabrane slike.
- GOTO: Pritisnite ovaj taster i izaberite sliku po brojevima. Uređaj će reprodukovati disk od izabrane slike.

[■] : Pritisnite ovaj taster jednom da pauzirate disk, pritisnite ovaj taster ponovo ili pritisnite [▶] da reprodukujete disk.

[▶] : Pritisnite ovaj taster da reprodukujete disk ili nastavite reprodukciju.

PONOV : Pritisnite ovaj taster da prebacite na format ponavljanja reprodukcije.

▶▶/◀◀ : Pritisnite ovaj taster da se prebacite na prethodnu/sledeću sliku.

- LEVO/DESNO taster na daljinskom upravljaču: Pritisnite DESNO taster da okrenete sliku u smeru kazaljke na satu, pritisnite LEVO taster da okrenete sliku u smeru suprotnom od kazaljke na satu.
- ZOOM: Pritisnite ovaj taster da zumirate/odzumirate/zadržite tu veličinu slike. Tasteri sa strelicama će se koristiti za pomeranje slike kada je slika zumirana.

Reprodukujte sa USB i SD/MMC kartice:

- Priključite USB na USB interfejs. Pritisnite DVD/USB/SD taster, uređaj će reprodukovati sa te putanje automatski.
- Ubacite SD/MMC karticu u SD/MMC interfejs kartice. Pritisnite DVD/USB/SD taster, uređaj će reprodukovati upravljački program kartice automatski.

Reprodukujte DIVX disk:

DIVX je snimajući/video format datoteke. To je DVD kvalitet diska većeg kapaciteta.

Format je AVI, na primer:

Datoteka od 1,5 sata	MPEG-12 format	DIVX format
DVD(MPEG-2)	Oko 1,5-2GB	Oko 600-800MB
VCD(MPEG-1)	Oko 800MB-1 G	Oko 200-300 MB

Upoređivanje MPEG-1, MPEG-2 i MPEG-4

	MPEG-1	MPEG-2	MPEG-4
Brzina(kb/s)	1380kb/s(352X288)	6500kb/s	(880kb/s(720X576)
Video kvalitet	DOBAR	Odličan	Perfektan
Hardverska zahtevnost	Mala	Srednja	Veliika

TEHNIČKE SPECIFIKACIJE

Podržava diskove:	DVD/VCD/CD/MP3/MPEG4/DIVX
Veličina ekrana:	7 inča
Opseg frekvencije:	20Hz-20KHz
Video izlaz:	I/p-p75 Ohm neizbalansiran
Audio izlaz:	1.4Vrms/10Kohm
Dinamički opseg:	≥85db
Laser:	poluprovodni laser, talasne dužine: 650mm/795mm
Napajanje:	DC 9-12V
Snaga:	12W
Radna temperatura:	5-40 C
Baterija:	Li baterija

RJEŠAVANJE PROBLEMA

Problem i rešenje:

Vezano za održavanje, molimo da pratite uputstva kako biste ustanovili uzroke problema.

Problem	Uzrok	Način rešenja
Nema napajanja	Napojni adapter nije dobro priključen na uređaj ili uključen u utičnicu.	Ubacite napojni adapter u DCIN priključak i električnu utičnicu.
Nema zvuka	Jačina je podešena na najslabije	Pritisnite VOL+ da pojačate zvuk
	U stanju nečujnosti	Pritisnite MUTE da povratite zvuk
	U stanju REW/FWD	Pritisnite PLAY ili PLAY/PAUSE da povratite reprodukciju
	Zvuk iz slušalica	Zvuk će dolaziti iz zvučnika nakon izvlačenja slušalica
Ne može se reprodukovati disk	Disk okrenut naopako	Postavite disk pravilno
	Priljav disk	Očistite disk
	Nije kompatibilan sa uređajem	Postavite kompatibilan disk

Problem	Uzrok	Način rešenja
Neispravnost daljinskog upravljača	Nema signala na prijemniku daljinskog upravljača	Usmerite daljinski upravljač ka prijemniku
	Udaljenost između daljinskog upravljača i uređaja je prevelika.	Držite udaljenost između daljinskog upravljača i uređaja do 6 metara.
	Istrošenost baterije daljinskog upravljača	Zamenite novim baterijama
	Nema baterija u daljinskom upravljaču	Ubacite baterije
Uređaj ne može da čita sa otvora za USB ili karticu,	Terminalni kvar	Isključite iz struje i ponovo otvorite uređaj
	Ubačeni USB ili memorijska kartica nisu odgovarajući	Uređaj ne može da podrži neodgovarajući USB ili memorijsku karticu. Ubacivanje neoriginalnog USB ili memorijske kartice može dovesti do prestanka napajanja jedinice. Molimo isključite uređaj. Uređaj će se vratiti u normalu nakon restartovanja.



CL-1461



LE-247802



TXCD-1536

